

Shot Navi® Crest II Touch

Quick Start Guide (Golf Navigation)

Thank you for purchasing Shot Navi CrestII Touch. We hope this product assists you in improving your score and enhancing your play speed

This guide provides an overview of the main functions commonly used when using this product on a golf course. For precautions on use, warranty terms, detailed product descriptions, and functions or settings not covered in this guide, please refer to the user manual available on our website.

User Manual
<https://shotnavi.jp/snp/crest2touch/manual.php>



Product Information
<https://shotnavi.jp/snp/crest2touch/>



v2502

- Short Press
- Long Press
- Tap: Touch the screen with your finger
- Swipe: Scroll the screen up, down, left, or right with your finger

① How to Start Navigation

※Please perform GPS reception near the teeing ground of the starting hole



 
Wristwatch Mode

- Backlight
 - Power ON/OFF
 - Change Watch Face
 - Start Golf Navigation
 - Display Main Menu
 - Bluetooth ON/OFF
- Display Main Menu
Activity Menu (Pedometer, etc.)
Change Watch Face

Golf Navigation Mode

- Large Text Display
 - Play Information
 - Switch FW Mode
 - Register Location
 - Navi Menu/Back
 - Scorecard
- Navi Menu
Scorecard

Navigation Screen

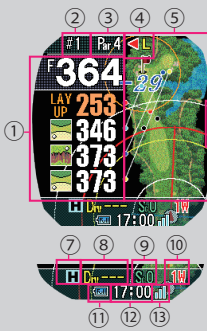

- Displays remaining distance to green or hazard
- Hole number
- Par number
- Displays left or right green when there are two-green
- Current hole layout
- Current view and hazard position
 - 1st: Green view
 - 2nd: Simple view
 - 3rd and after: Location of hazards displayed in hazard view
- Horizontal/slope-adjusted distance icon
- Drive distance
- Score
- Recommended club
- Battery level
- Current time
- GPS reception sensitivity

② Navigation Menu

Displays navigation menus such as suspending navigation and changing hole



From the navigation settings, you can configure various navigation-related options, such as changing the distance unit. Tap each item to select it. Press the lower button again to return to the navigation screen.

③ Auto View Change/Auto Measure Function

Auto View Change

The navigation screen automatically switches between the Hazard, Simple, and Green Views depending on the remaining distance to the green

① Hazard View



Distance to the front edge and various hazards on the course

② Simple View



Distances to the center, front edge, and back edge of the green

③ Green View



Distance to the center and front edge and undulation, shape, width, and depth of the green

Auto Measure (Automatic Distance Measurement)

The device automatically detects your swing and registers the location

※ If the distance between shots is too close, it is not automatically detected. Please register the location manually.



① Automatically detects your swing and registers the location

Drv is changed from yellow to red



② Automatically displays the distance from ①



③ Automatically displays the distance from ②


Pin Position Registration

In Green View, tap the pin icon on the screen to register the pin position

④ Dynamic Green Eye Function

Green View displays the undulations of the green in color

High Low

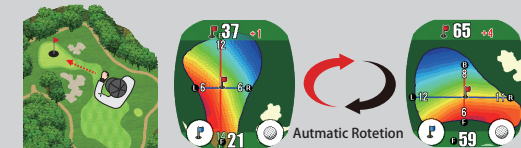

Green View display automatically rotates to match the direction from your current location, showing the width, depth, and distance to the front edge and center of the green

※ Dynamic Green Eye is not available in competition mode or for golf courses outside of Japan

⑤ Three-Point Distance Measurement



While in Simple or Hazard View, tap anywhere on the layout. It displays the distance from your current location to the tapped point (red line) and from that point to the green center (blue line).

⑥ Fairway Navigation Function

Fairway Navigation function displays the distance from your current location to the center of the targeted fairway, as well as the distance from that point to the green




Short press the middle button (Short press the lower button to return to the navigation screen)

A message is displayed when compass calibration is required. Rotate the device several times in a figure-eight motion to complete the calibration


⑦ Layup Navigation

The distance for a layup is provided to help you target the green with your preferred club distance for the next shot

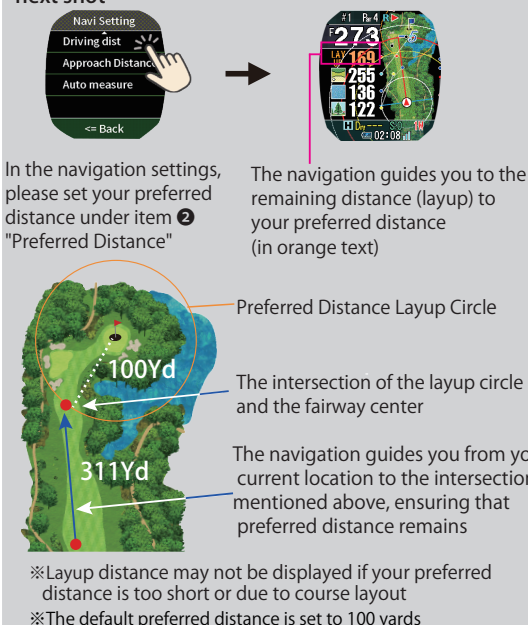

⑧ Height Difference

Switches between horizontal distance and slope-adjusted distance

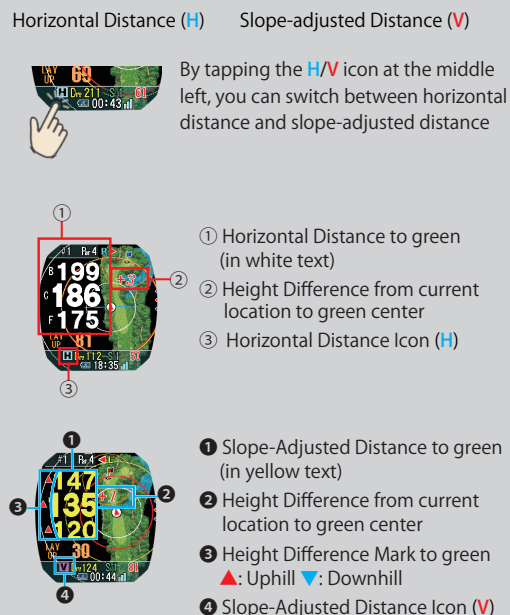

⑨ Display Options

During a round, you can enable or disable the distance circle display




⑩ Scorecard


You can enter the score (strokes, putts)




⑪ Display Text in a Larger Size

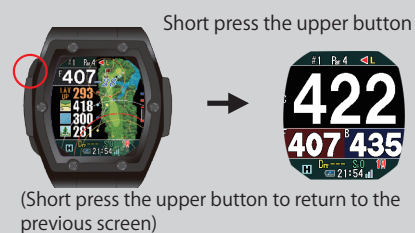


⑫ Two-Green Manual Switching

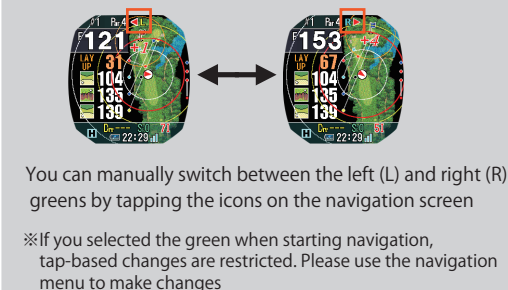

⑬ GPS Reception

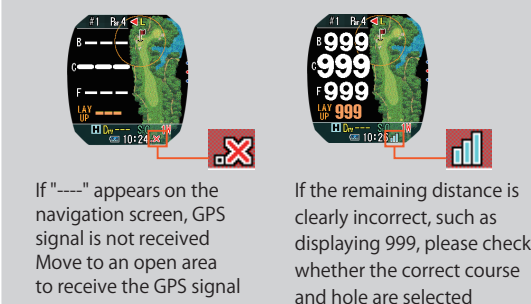

⑭ Charging

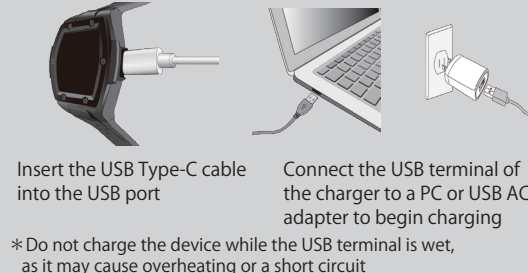 

⑮ Exit Navigation/Power OFF



⑯ Reset

If the GPS is not working, the screen freezes, or the device does not power on, it may be frozen

To reset and reboot the device

Long press both the middle and bottom buttons simultaneously for 10 seconds

⑰ Product Specifications

Dimensions:	57 x 46 x 14.5mm (excluding the belt)
Weight:	64g
Display:	MIP Color Reflective LCD
Battery:	Lithium polymer battery
Water Resistance:	IPX7 (Water-resistant to a level of daily use)
Full Charging Time:	Approximately 2.5 hours (via PC, depending on the charging environment)
Continuous Usage Time:	GPS mode: Up to 8 hours Watch mode: Up to 20 days ※
Data Update Method:	Data update via USB storage mode
Included Accessories:	• Charging/Communication USB Cable Type-C • Watch Case • Quick Start Guide/Warranty

※ The continuous usage time of the battery varies depending on the frequency and duration of use