

Shot Navi® INFINITY Touch

Quick Start Guide (Golf Navigation)

Thank you for purchasing Shot Navi INFINITY Touch. We hope this product assists you in improving your score and enhancing your play speed.

This guide provides an overview of the main functions commonly used when using this product on a golf course. For precautions on use, warranty terms, detailed product descriptions, and functions or settings not covered in this guide, please refer to the user manual available on our website.

User Manual

https://shotnavi.jp/snp/infinity_tch/manual.php



Product Information

https://shotnavi.jp/snp/infinity_tch/



- Short Press
- Long Press
- Tap: Touch the screen
- Swipe: Vertical and horizontal scroll the screen

① How to Start Navigation

※ Please perform GPS reception near the teeing ground of the starting hole

① Power On



Press and hold the upper button
The logo appears on the screen, and then the watch screen is displayed

② Start GPS



Press and hold the middle button

③ Select Competition Mode




※ Selecting "Yes" hides height differences and other information

④ Automatic Golf Course Search



⑤ Navigation Start

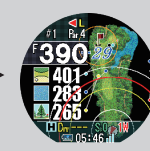

For courses with two-green, you can select the green type (e.g., Bent, Kourai)

Wristwatch Mode

- Backlight
- Power ON/OFF
- Change Watch Face
- Start Golf Navigation
- Display Main Menu
- Bluetooth ON/OFF



Display Main Menu

Activity Menu (Pedometer, etc.)

Change Watch Face

Golf Navigation Mode


- Large Text Display
- Play Information
- Switch FW Mode
- Register Location
- Navi Menu/Back
- Scorecard



Navi Menu

Scorecard

Navigation Screen

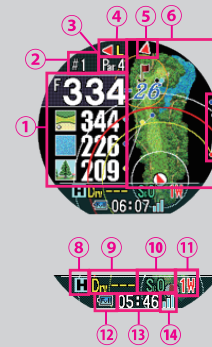

- Displays remaining distance to green or hazard
- Hole number
- Par number
- Displays left or right green when there are two-green
- Displays the direction of the green from the current location (hidden when compass calibration is required)
- Current hole layout
- Current view and hazard position
 - 1st: Green view
 - 2nd: Simple view
 - 3rd and after: Location of hazards displayed in hazard view
- Horizontal/slope-adjusted distance icon
- Drive distance
- Score
- Recommended club
- Battery level
- Current time
- GPS reception sensitivity

② Navigation Menu

Displays navigation menus such as suspending navigation and changing holes



From the navigation settings, you can configure various navigation-related options, such as changing the distance unit
Tap each item to select it
Press the lower button again to return to the navigation screen

③ Auto View Change/Auto Measure Function

Auto View Change

The navigation screen automatically switches between the Hazard, Simple, and Green Views depending on the remaining distance to the green

① Hazard View




Distance to the front edge and various hazards on the course

② Simple View



Distances to the center, front edge, and back edge of the green

③ Green View

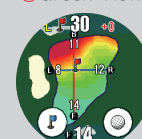

Distance to the center and front edge and undulation, shape, width, and depth of the green


Auto Measure (Automatic Distance Measurement)

The device automatically detects your swing and registers the location


※ If the distance between shots is too close, it is not automatically detected
Please register the location manually




① Automatically detects your swing and registers the location
Dry is changed from yellow to red

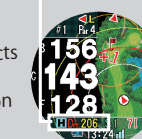

② Automatically displays the distance from ①

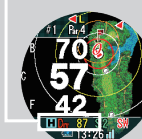

③ Automatically displays the distance from ②

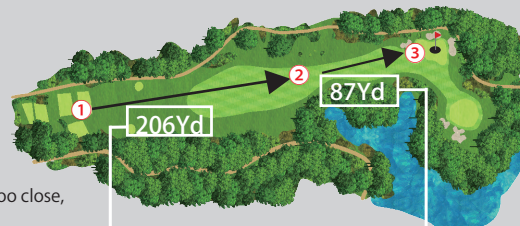


Pin Position Registration

In Green View, tap the pin icon on the screen to register the pin position

④ Dynamic Green Eye Function

Green View displays the undulations of the green in color

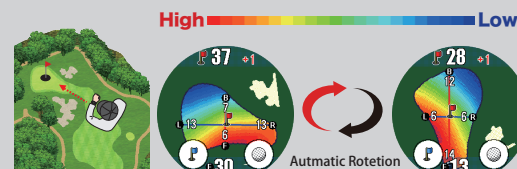

Green View display automatically rotates to match the direction from your current location, showing the width, depth, and distance to the front edge and center of the green

* Dynamic Green Eye is not available in competition mode or for golf courses outside of Japan


⑤ Three-Point Distance Measurement



While in Simple or Hazard View, tap anywhere on the layout
It displays the distance from your current location to the tapped point (red line) and from that point to the green center (blue line)


⑥ Fairway Navigation Function

Fairway Navigation function displays the distance from your current location to the center of the targeted fairway, as well as the distance from that point to the green

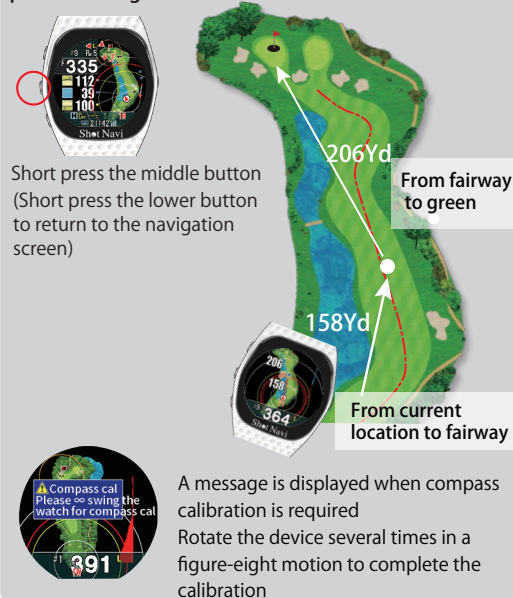


⑩ Scorecard

You can enter the score (strokes, putts)

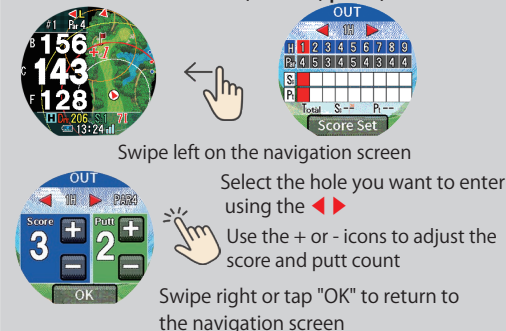

⑫ Two-Green Manual Switching

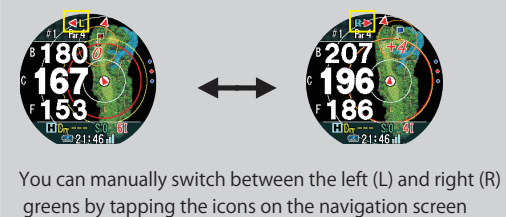


* If you selected the green when starting navigation, you cannot change it by tapping. Please use the navigation menu to make changes

⑦ Height Difference


Switches between horizontal distance and slope-adjusted distance

Horizontal Distance (H) Slope-adjusted Distance (V)

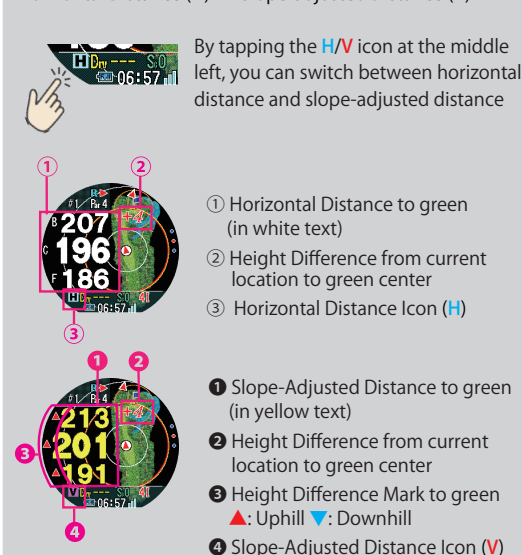

⑧ Display Options

During a round, you can enable or disable the distance circle display

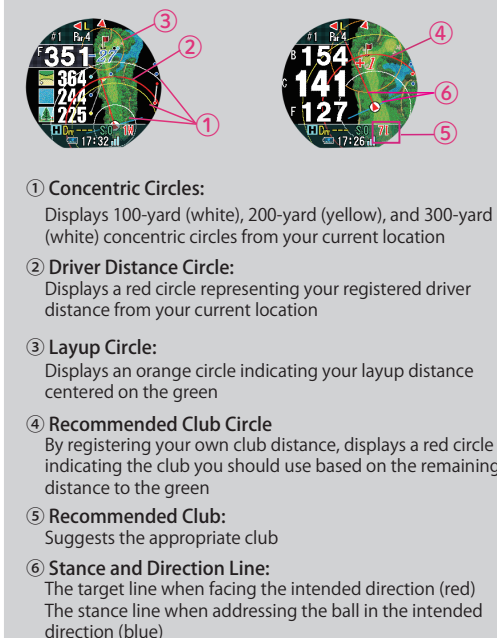


⑨ Manual Location Registration


For short-distance approaches or putts that are not automatically swing detected, you can manually register the location; it is linked to score




⑩ Display Text in a Larger Size

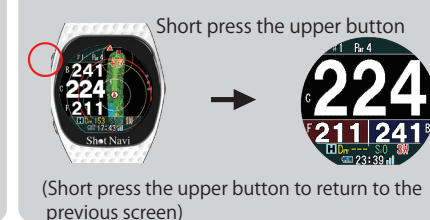

⑬ GPS Reception

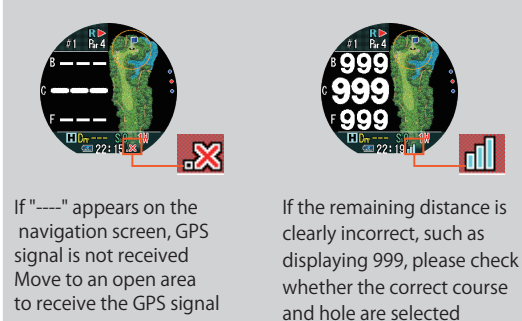


⑭ Charging

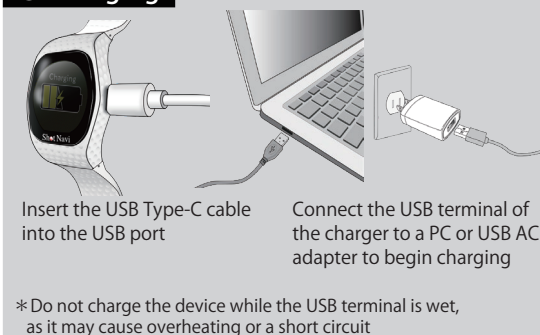

⑮ Exit Navigation/Power OFF



⑯ Reset

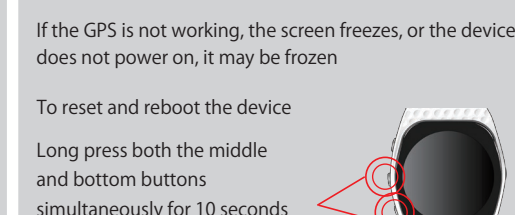

⑰ Product Specifications

Dimensions:	56 x 40 x 13.4 mm (excluding belt)
Weight:	50g
Display:	MIP Color Reflective LCD
Battery:	Lithium polymer battery
Water Resistance:	IPX7 (Water-resistant to a level of daily use)
Full Charging Time:	Approximately 2.5 hours (via PC, depending on the charging environment)
Continuous Usage Time:	GPS mode: Up to 9 hours Watch mode: Up to 15 days
Data Update Method:	Data update via USB storage mode or smartphone app
Included Accessories:	• Charging/Communication USB Cable Type-C • Watch Case • Quick Start Guide/Warranty

* The continuous usage time of the battery varies depending on the frequency and duration of use